

# Tinkerframe Large lid that fits Exo Terra Large terrariums

## ET36 Model

Designed and sold by C&M Terrariums

### Assembly



1. There are 6 bars. The two that do not have mesh are the side bars. There are 2 front bars, which are wider than the back bars. One of the front bars has the name of the lid on the side of it.

2. Place the 2 front bars next to each other. Make sure the 3 capped holes are evenly spaced as shown in 2nd photo. A capped hole should not be right next to another capped hole.

3. Repeat step 2 but for the back bars. You should now have one longer bar for front and one for back.

4. Line the 4 bars up on a table face down as seen in the second picture. The flat edge on each piece should be facing out like when assembling a puzzle. The tapered edge with the small key holes should be facing in as these are used to secure your glass.

5. Line the male end nub of the side bar with the matching key hole on the front bar from above and push down into the hole to lock the bars together. Repeat with the other side bar on the other side of the front bar.

6. Do the same now with the back bar. It should now be a complete frame.

7. The opening for the glass is 14" x 33 5/8". You will need to get glass cut to fit. There is a 5mm lip so we suggest you cut the glass 1/16" smaller than the opening since it can be a tiny bit too small but not too big. We suggest glass be cut 13 15/16" by 33 9/16".

8. Place the glass in the center. Use the 4 corner shaped tabs to secure the corners of the glass. Carefully push the two heads into each keyhole. Use something like a flat head screwdriver or needle nose pliers or a house key to push the heads until the corner piece is flush against the glass.



9. Use the small T tabs in the remaining key holes. Push the tab into the hole with your finger and then push the head of the tab the rest of the way in using a tool until they are flush against the glass.

10. Your lid is now complete. If you bought any accessories, continue to step 11.

11. If you purchased a misting nozzle adapter or feeding cap, you will need to unscrew the cap in any hole you want to use. This can be done by grasping it on either side and turning it, or using a coin in the groove underneath.

12. Once the hole is empty, screw your accessory into it.

13. If you purchased a solid vent kit and want to block more airflow, place the vent blocker into the vent you want to block and secure it with the tabs like you did the glass.

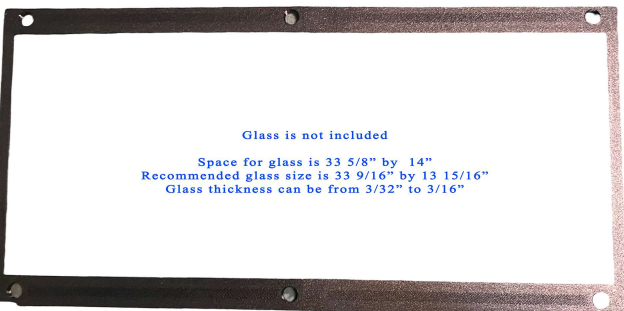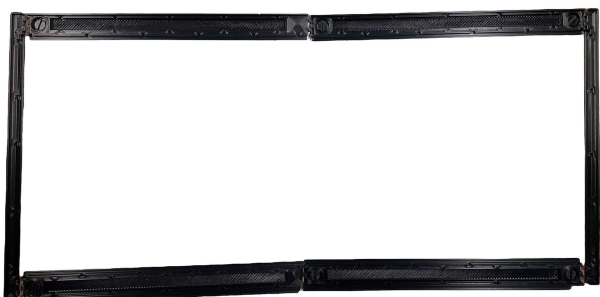

Glass is not included

Space for glass is 33 5/8" by 14"  
Recommended glass size is 33 9/16" by 13 15/16"  
Glass thickness can be from 3/32" to 3/16"

For more detailed assembly instructions, watch our assembly video (coming soon) that is available on our website [CMTerrariums.com](http://CMTerrariums.com).