

# Tinkerframe ZM14 lid

(fits Zoo Med NT-25DW terrarium)

Designed and sold by C&M Terrariums

## Assembly


Pic 1



1. There are 4 bars (Pic 1). The two that do not have mesh are the side bars. The one that writing on the side is the front bar. The other mesh one is the back bar.
2. Line the 4 bars up on a table face down as seen in Pic 2. The flat edge on each piece should be facing out like when assembling a puzzle. The tapered edge with the small key holes should be facing in as these are used to secure your glass. Make sure the lock points are near the front bar not the back bar.
3. Line the male end nub of the side bar with the matching key hole on the front bar from above and push down into the hole to lock the bars together. Repeat with the other side bar on the other side of the front bar.
4. Do the same now with the back bar. It should now be a complete frame (Pic 3).
5. The space for the glass is 13 1/8" x 8". You will need to get glass cut to fit unless you purchased the acrylic. Glass is recommended with high humidity species. There is a 5mm lip so we suggest you cut the glass 1/16" smaller than the opening since it can be a tiny bit too small but not too big. We suggest glass be cut to 13 1/16" by 7 15/16".

Pic 2

(Front Bar)

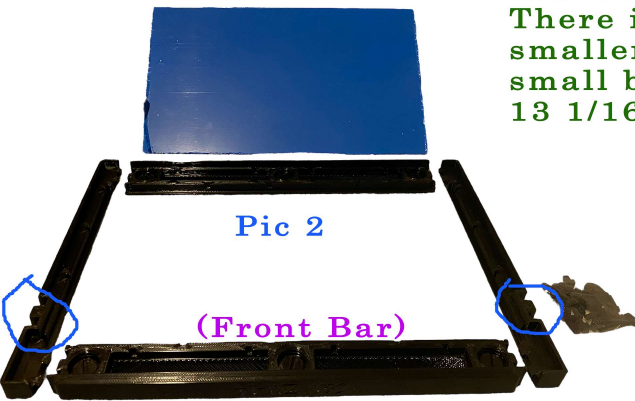

6. Place the glass in the center. Use the 4 corner shaped tabs to secure the corners of the glass. Carefully push the two heads into each keyhole. Now use something like a flathead screwdriver or needle nose pliers or a house key to push the heads until the corner piece is flush against the glass.

7. Use the small T tabs in the remaining key holes. Push the tab into the hole with your finger and then push the head of the tab the rest of the way in using a tool until they are flush against the glass.

8. With your lid right side up, take the 2 locking U-tabs from the bag. Place the tab with the flat side facing the center of the lid over the protrusion in the center of the lock space on the lid (Pic 4). Push it down until it clicks into place (Pic 5). There are two rounded nubs on the locking tab that will click into two round holes on the lid, making a hinge. Repeat on the other side.


9. Your lid is now complete. If you bought any accessories, continue to step 10.

10. If you purchased a misting nozzle adapter or feeding cap, you will need to unscrew the cap in any hole you want to use. This can be done by grasping it on either side and turning it, or using a coin in the groove underneath.


11. Once the hole is empty, screw your accessory into it.

12. If you purchased a solid vent kit and want to block more airflow, place the vent blocker into the vent you want to block and secure it with the tabs like you did the glass.


Pic 3

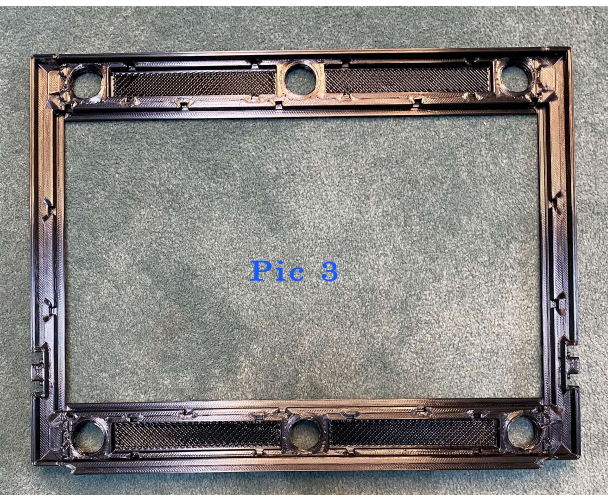

Pic 4

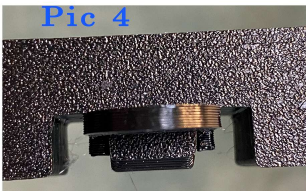

Pic 5

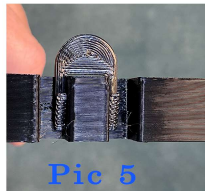

For more detailed assembly instructions, watch our assembly video (coming soon) that is available on our website [CMTerrariums.com](http://CMTerrariums.com).